


Tideflex® CheckMate UltraFlex® Inline Check Valve Installation, Operation and Maintenance Manual

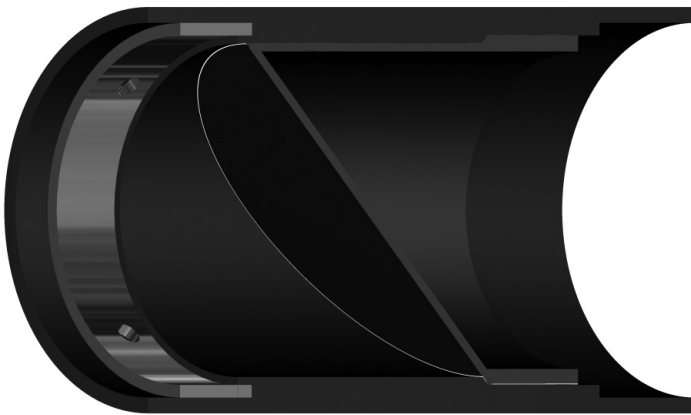

The revolutionary design of the CheckMate® Inline Check Valve provides superior backflow prevention and odor mitigation in stormwater, CSO and SSO outfalls. The CheckMate's® custom-engineered, all-rubber unibody design eliminates costly backflow from oceans, rivers and interceptors. The valve's unique elastomer fabric and wire reinforced design provides a proven record of maintenance-free performance, cost savings and results that no other inline check valve can match. The CheckMate® is built to suit all your site-specific and flow needs.

The CheckMate® has a 100% fabric and elastomer construction that eliminates corrosion problems. Because the CheckMate® is made with a unibody construction, there are no mechanical components that trap debris, corrode or fail.

The CheckMate® Valve's inherent flexibility virtually eliminates seating problems. The CheckMate® remains in the closed position until forward differential pressure opens it. The fabric-reinforced elastomer CheckMate® Valve seals around silt and small debris, preventing unwanted backflow.

The major advantage of the CheckMate® Valve is its extremely low headloss. The CheckMate® can open to a near full pipe diameter. This maximizes flow capacity of the outfall, which is particularly beneficial in low-lying areas where limited driving head is available.

Tideflex® recommends pinning all CheckMate® Valves for added security and stability. CheckMate's® effectively have a zero face-to-face dimension because they fit completely inside of the pipe. No modification of piping is required provided adequate pipe length exists.

IMPORTANT

Please take a moment to review this manual. The improper installation or use of this product may result in personal injury, product failure, or reduced product life. Tideflex® can accept NO liability resulting from the improper use or installation of this product. If you have any questions or problems, please call the customer service department at (412) 279-0044. We appreciate your comments. Thank you for choosing Tideflex®.


CheckMate® Installation Procedure

NEVER...
Install the valve at an angle

NEVER...
Use Sharp Tools on Rubber

NEVER...
Exceed Design Back Pressure

NEVER...
Install the Valve Backwards

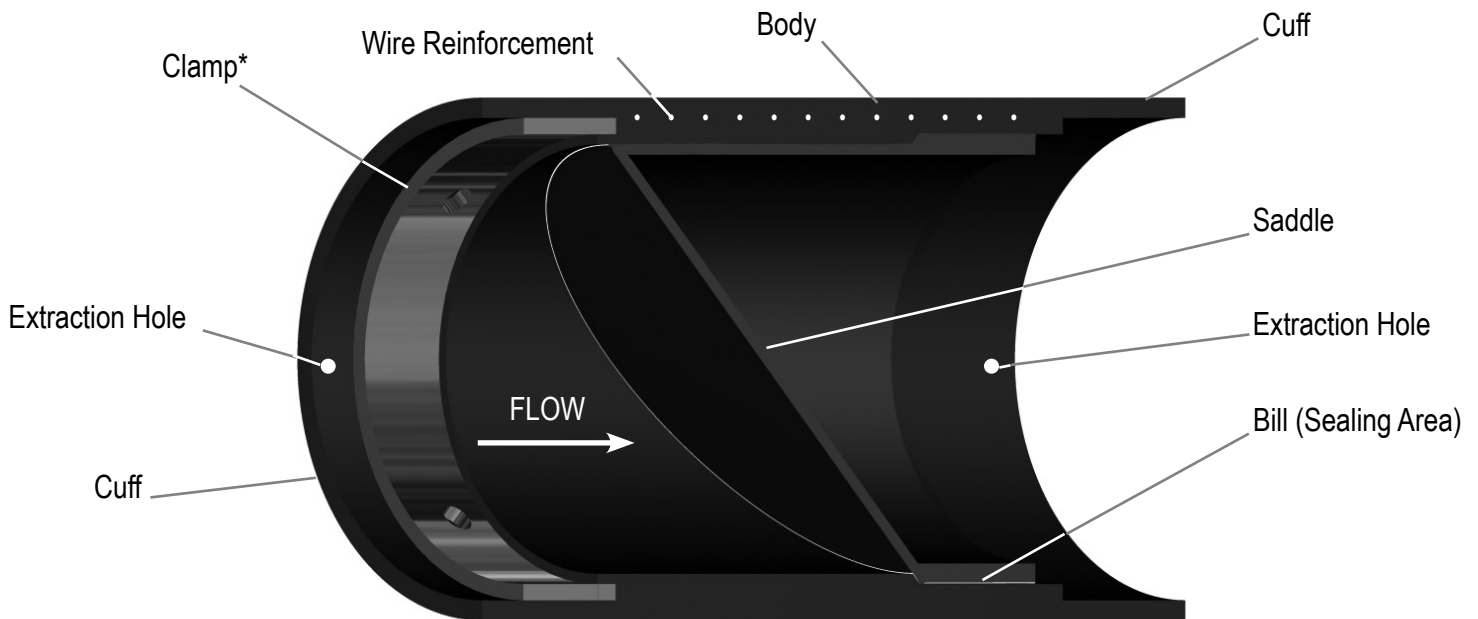

*Clamps are installed in the upstream or downstream cuff, depending upon the application. The illustration above is shown clamped upstream.

CHECKMATE® INSTALLATION

1. Product Shipping

Valve sizes 3" - 18" are furnished with one clamp. Valves 20" - 60" ship with two clamps. 72" valves ship with three clamps.

NOTE: A clamp is installed on each end of the valve to keep the valve's shape during transit and storage. Once the installation orientation is determined the CheckMate® valve will be clamped from either the upstream or downstream side. **For valves with two or three clamps, they can be installed onto the same side of the valve and offset from each other, as illustrated in Figure 1.**

2. Unpacking & Lifting

Do not use sharp tools when unpacking this product as it may damage the valve.

For larger CheckMate® valves, the valve should be lifted with either a sling or with supports around the O.D. at each side of the valve to ease the installation procedure. Do not place an object through the valve in order to lift.

3. Inspection of Pipe I.D.

Check the inside diameter (I.D.) of the pipe section for rough or damaged areas. The inside surface should be uniform and relatively smooth. Long gouges or cracks in the pipe may allow water to pass and should be filled prior to installation. Do not attempt to install a CheckMate® in a smaller pipe I.D.

4. Pipe I.D. Measurements

The pipe I.D. is to be checked in the field. It should be a consistent diameter for the length of valve and should not be out of round. When there is a +/- tolerance on the pipe I.D., the CheckMate® Valve should be ordered to the smallest pipe I.D.. Then, rubber adhesive strip can be applied to both CheckMate® cuffs to build the cuff O.D. up to the actual pipe I.D. See procedure in #5.

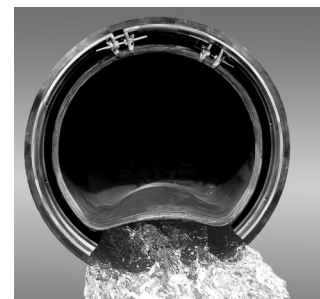


Figure 1 – Clamps shown installed on the same side of valve

CAUTION: Do not try to bend, collapse or fold the valve in order to facilitate the installation as this will cause permanent damage and will not allow the valve to return to a fully round shape.

CheckMate® Rubber Adhesive Strip Build Up Procedure

5. Rubber Adhesive Strip Build up

When valve O.D. is smaller than the pipe I.D., one-sided rubber adhesive strip is used to build up the O.D. of both CheckMate® cuffs to the actual pipe I.D.

NOTICE: Clean and dry the exterior of the valve prior to beginning rubber adhesive strip build up procedure.



STEP A: Place the valve on a solid, flat surface with the clamped end hanging slightly over the edge of the surface.



STEP B: Slowly rotate the valve while firmly pressing the rubber adhesive strip onto itself in concentric layers until valve O.D. is equal to or a fraction smaller than pipe I.D.



STEP C: Repeat steps A and B on the opposite side of the valve to ensure uniformity of the CheckMate's® O.D. is consistent and matches the pipe I.D.



STEP D: Lubricate the valve and rubber adhesive strip surface. Slide valve into pipe. Ensure the area marked TOP is in the 12:00 position.



STEP E: Check O.D. of the valve to ensure it fits snugly into the I.D. of pipe. If loose, add another layer(s) of the rubber adhesive strip.



STEP F: Once in place, tighten the clamp to secure it against the pipe and compress the rubber adhesive strip.

CheckMate® Installation Procedure


6. Preparation

The CheckMate® Valve uses expanding clamp(s) to exert pressure outwards on the walls of the valve to wedge it in place within the pipe. The walls of the pipe should be clean and free of debris prior to installation.

The valve should be inserted fully into the pipe so that no part of the cuff or bill extends outside the pipe. Ensure that the valve is not slanted at an angle with the bill pointing upwards or downwards. The valve centerline should be parallel to the pipe centerline.

Tidflex® Technologies recommends pinning the CheckMate® Valve on all installations. See below.

Four pre-drilled holes are provided in each expansion clamp. At least one clamp should be pinned. On exposed pipe, holes can be drilled through the valve and pipe, and a bolt run through secured with a nut. For buried pipe, silicon or similar sealant should be used to seal bolts.

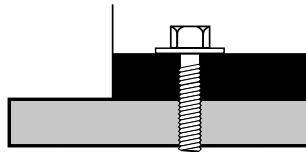

7. Lubrication

The outside of the valve can be lubricated with a water-based lubricant prior to inserting the valve into the pipe. If the taping procedure has been used, the surface of the tape can be lubricate to aid insertion.

CAUTION: Do not use petroleum-based lubricants on this product or on the vulcanized rubber tape.

8. Plumb Lines and Arrows

The CheckMate® Valve arrives with a “top” arrow, “flow” arrow and plumb lines, marked in white, at the 12:00 and 6:00 position of the valve. Utilize this marking to orient the valve in the pipe, as well as to ensure the valve is oriented correctly in pipe section.

9. Valve Orientation

The CheckMate® Valve must be installed in a horizontal pipe. Valves 4" – 18" (nominal) are supplied with a single clamp. The clamp turnbuckle should be oriented at top dead center as delineated by the plumb line.

Valves 20" – 60" (nominal) are supplied with two clamps. The turnbuckles should be oriented 45° from the top center plumb line.

The 72" is supplied with three clamps. The turnbuckle for one clamp to be at top center. The other clamps to be 45° to each side of top center.


10. Insertion Into Pipe

Clamp to support the shape of the cuff should be hand tight and should be extended outward, but only tight enough to loosely keep the shape of the cuff during installation.


CAUTION: If you expand the clamp excessively at this step it will hinder or prevent the CheckMate® valve being fully inserted into the pipe.

CheckMate® Clamping Diagrams


Downstream Clamp




Downstream Flanged

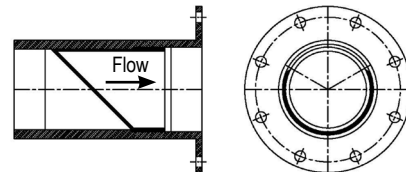


Downstream Flanged Thimble Insert

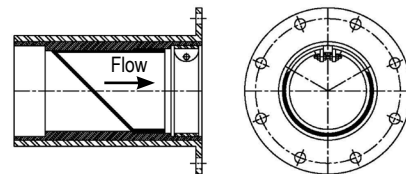


Upstream Clamp



Upstream Flanged

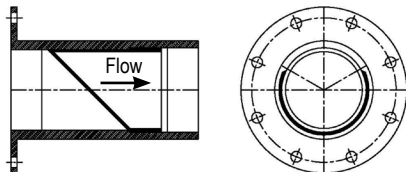

Upstream Flanged Thimble Insert

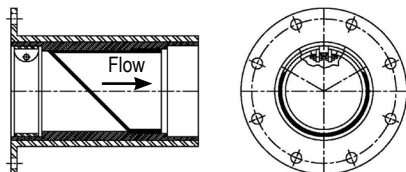

11. Pallet Push for Larger CheckMate® Valves

Larger CheckMate® valves can be pushed into the pipe utilizing the shipping pallet. The pallet should be placed perpendicular to the valve being inserted into the pipe. Then, with assistance from an excavator, push with consistent even force against the shipping pallet to insert the CheckMate® valve into the pipe.

See the image to the right for the suggested positioning and usage of the excavator's shovel assistance for larger-sized CheckMate® valves. Clamps must be installed to prevent damage to cuff.




Pallet Push method for installing CheckMate® Valve

12. Corrugated Pipe and Smooth Wall (PVC, HDPE) Pipe Installation

For installation on corrugated pipe, it is recommended that the corrugations be filled with hydraulic cement (or similar material) that will provide a smooth I.D.

For smooth wall pipe, it is recommended that the valve be pinned.

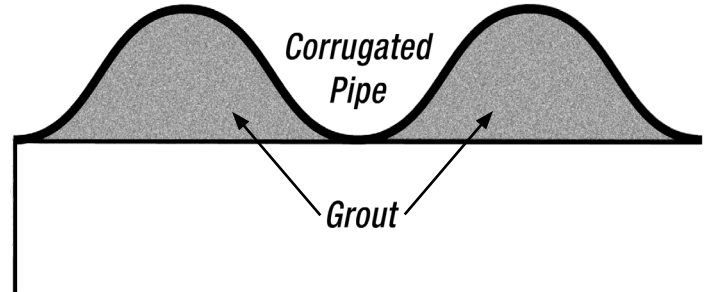

CheckMate® can be made for any pipe I.D. Built to fit in sizes from 3-72" (75-1800mm).

Flange shape and bolt pattern can be customized. Flangeless thimble inserts are available.

		DIMENSIONS										
		NOMINAL PIPE SIZE I.D.		OVERALL LENGTH*		NUMBER OF CLAMPS	CUFF DEPTH		BACK PRESSURE RATING**		WEIGHT***	
		Inches	Millimeters	Inches	Millimeters		Inches	Millimeters	Feet	Meters	Lbs	Kg
Low Pressure	3	75	5.1	130	1	1.5	38	10	3.0	0.7	0.3	
	4	100	7.9	201	1	1.5	38	10	3.0	1.5	0.7	
Standard Pressure	4	100	7.9	201	1	1.5	38	85	26.0	3	1.5	
	5	125	9.5	241	1	1.5	38	83	25.3	4	2	
	6	150	11.0	279	1	2.0	51	83	25.3	9	4	
	7	175	12.8	325	1	2.0	51	79	24.1	11	5	
	8	200	15.2	386	1	2.0	51	79	24.1	13	6	
	9	225	15.4	391	1	2.0	51	75	22.9	17	8	
	10	250	16.1	409	1	2.0	51	71	21.6	20	10	
	12	300	19.8	503	1	2.0	51	68	20.1	37	17	
	14	350	25.8	655	1	4.0	102	64	20.0	110	50	
	15	381	25.8	655	1	4.0	102	62	18.9	120	55	
	16	400	28.6	726	1	4.0	102	60	18.3	133	52	
	18	450	31.0	787	1	4.0	102	56	17.1	143	65	
	20	500	42.1	1069	2	8.0	203	53	16.2	223	102	
	24	600	47.5	1207	2	8.0	203	45	13.7	304	137	
	26	650	50.0	1270	2	8.0	203	42	12.8	370	168	
	28	700	52.0	1321	2	8.0	203	40	12.2	434	197	
	30	750	54.9	1395	2	8.0	203	38	11.6	500	227	
	36	900	62.3	1582	2	8.0	203	30	9.1	828	376	
42	1050	70.6	1793	2	8.0	203	28	8.5	1423	646		
48	1200	79.0	2007	2	8.0	203	26	7.9	1801	817		
54	1350	86.4	2195	2	8.0	203	20	6.1	2700	1225		
60	1500	96.8	2459	2	9.0	229	18	5.5	3315	1504		
72	1800	119.0	3023	3	12.0	305	15	4.6	6100	2767		

*Shorter lengths available.

**Back pressure measured from pipe invert. Higher back pressure ratings available. Consult factory.

***Weights are approximate and do not include crating.

13. Flanged Valve Bolt Torques

The valve end with the rubber flange shall be installed using the backup rings provided. The sleeve split should be installed facing downstream, with the split in the vertical position.


The installation bolt torque on the end flange bolts are listed in the table below.

RECOMMENDED MINIMUM BOLT TORQUE

Valve Size	Bolt Size	Torque (ft*lb.)
1"	1/2" - 13NC	20
1-1/2"	1/2" - 13NC	20
2"	5/8" - 11NC	30
2-1/2"	5/8" - 11NC	40
3"	5/8" - 11NC	40
4"	5/8" - 11NC	30
5"	3/4" - 10NC	40
6"	3/4" - 10NC	30
8"	3/4" - 10NC	40
10"	7/8" - 9NC	40
12"	7/8" - 9NC	50
14"	1" - 8NC	50
16"	1" - 8NC	50
18"	1-1/8" - 7NC	30
20"	1-1/8" - 7NC	30
24"	1-1/4" - 7NC	40
30"	1-1/4" - 7NC	30
36"	1-1/2" - 6NC	40
42"	1-1/2" - 6NC	50
48"	1-1/2" - 6NC	55
54"	1-3/4" - 5NC	60
60"	1-3/4" - 5NC	80
72"	1-3/4" - 5NC	100

Torque values are suggested minimum values.

Torque all flange bolts in a star pattern, first to 50% of tabulated values, then retorque to 100% of tabulated values. If greater torque is required, continue retorquing in increments of 50% of tabulated values. Use of a high quality anti-seize compound on all bolt threads is recommended.

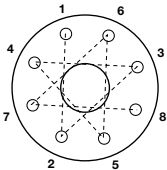

Always use a "star" pattern when bolting a check valve.

Variables such as the surface finish on bolt threads, type of anti-seize compound used, and surface finish of the mating flanges all have an effect on the minimum torque required to obtain a leak-tight flange seal.

During installation you may need to retorque the flange bolts several times for a proper seal. This will overcome any leaks due to the cold flow of the rubber sleeve flange.

CheckMate® Installation Notes

1. It is important that the CheckMate® is installed level within the pipe. The CheckMate® may "gap open" if installed improperly.
2. The sealing area of the CheckMate® must have room to expand outwards, while bottom of the sealing area rises. The area around the sealing area must be kept free of debris to allow the bill to close in order for the valve to seal properly.
3. The CheckMate® effectively reduces the inside diameter of the pipe in which it is installed, creating a restriction. It may also create a "ledge" inside the pipe, causing standing water.
4. Back pressure in excess of the back pressure rating may cause valve failure.
5. Should the conditions that the CheckMate® was designed for change, (line pressure, back pressure, chemical compatibility) the performance of the valve may suffer.
6. CheckMate® Valves must be installed in true round pipe which is concentric across the entire length. Out of round pipe may cause the sealing area of the valve to distort and gap, which will cause the valve to leak.

MAINTENANCE

Inspection

Valves should occasionally be inspected for damage, wear, and buildup of debris. The frequency of the inspections should be determined by the severity of the service and the environment in which it operates.

The clamps should be checked for proper tension, and be sure that the inside of the valve is free of debris. Soft marine growth is normal on valves in submerged applications. Because hard marine growth such as barnacles will not bond well to the CheckMate® they can be easily removed. Also insert pins to ensure they are tight.

STORAGE

If your CheckMate® is to be stored for a period of time prior to installation, the following storage guidelines will help to preserve the valve and assure a trouble-free installation:

1. Store in a clean, cool, dry location. Avoid exposure to light, electric motors, dirt, or chemicals.
2. Store valve vertically on floor or pallet.
3. Store valve to prevent other items from contacting check sleeve to prevent possible damage.
4. Store this manual with the valve, so that it is readily available at time of installation.

TROUBLESHOOTING GUIDE

Sleeve Inverted or Distorted

1. Excessive back pressure, water surge, or water hammer.

Leaking Around Perimeter of Valve

1. Tighten clamp.
2. Check for cracks and holes in surface of pipe.
3. If taped, check tape to ensure the pipe I.D. has been fully sealed

Backflow

1. Debris lodged inside bill.



Limited Warranty

Red Valve Company ("Seller") manufactured products, auxiliaries and parts thereof that we manufacture for a period of twenty-four (24) months from date of shipment from Seller's factory, are warranted to the original purchaser only against defective workmanship and material, but only if properly stored, installed, operated, and serviced in accordance with Seller's recommendations and instructions.

For items proven to be defective within the warranty period, your exclusive remedy under this limited warranty is repair or replacement of the defective item, at Seller's option, FCA Incoterms 2020 Seller's facility with removal, transportation, and installation at your cost.

Products or parts manufactured by others but furnished by Seller are not covered by this limited warranty. Seller may provide repair or replacement for other's products or parts only to the extent provided in and honored by the original manufacturer's warranty to Seller, in each case subject to the limitations contained in the original manufacturer's warranty.

No claim for transportation, labor, or special or consequential damages or any other loss, cost or damage is being provided in this limited warranty. You shall be solely responsible for determining suitability for use and in no event shall Seller be liable in this respect.

This limited warranty does not warrant that any Seller product or part is resistant to corrosion, erosion, abrasion or other sources of failure, nor does Seller warrant a minimum length of service.

Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than Seller or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to store, install, or operate said products and parts according to the recommendations and instructions furnished by Seller shall be a waiver by you of all rights under this limited warranty.

This limited warranty is voided by any misuse, modification, abuse or alteration of Seller's product or part, accident, fire, flood or other Act of God, or your failure to pay entire contract price when due.

The foregoing limited warranty shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to; an actuator is attached to the item by anyone other than a Seller factory authorized service personnel.

All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous warranty, and this shall be the only effective guarantee or warranty binding on Seller, despite anything to the contrary contained in the purchase order or represented by any agent or employee of Seller in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING REPAIR AND REPLACEMENT LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING, BUT NOT LIMITED TO, ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE SELLER'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS. NEITHER ANY PERFORMANCE OR OTHER CONDUCT, NOR ANY ORAL OR WRITTEN INFORMATION, STATEMENT, OR ADVICE PREPARED BY SELLER OR ANY OF OUR EMPLOYEES OR AGENTS WILL CREATE A WARRANTY, OR IN ANY WAY INCREASE THE SCOPE OR DURATION OF THIS LIMITED WARRANTY.

Limitation of Liability

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGE TO OR LOSS OF OTHER PROPERTY OR EQUIPMENT, BUSINESS INTERRUPTION, COST OF SUBSTITUTE PRODUCTS, LOSS OF TIME, LOSS PROFITS OR REVENUE, COST OF CAPITAL, LOSS OF USE, OR DIMINUTION IN VALUE) WHATSOEVER, AND SELLER'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION FOR BREACH OF CONTRACT BY YOU, OTHER THAN RIGHTS RESPECTING OUR LIMITED WARRANTY DESCRIBED ABOVE, MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: RedValve.com

E-Mail: support@redvalve.com



750 Holiday Drive, Suite 400, Pittsburgh, PA 15220 • Phone: 412-279-0044

Red Valve Company reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by Red Valve Company. Certified drawings are available upon request.